Thank you for your purchase! If you are happy with our product, please leave us a great review.

VC-J50004L VALVE COVER INSTALLATION TIPS

1. It is recommended to adhere to the torque specifications in the owner's manual (Step 1: 18 in-lb/Step 2: 73 in-lb).
2. It is recommended to use a new gasket.
3. It is recommended to use gasket sealant as required.
4. Ensure the cylinder head surface is clean and debris free prior to installation.
5. Please follow bolt pattern:

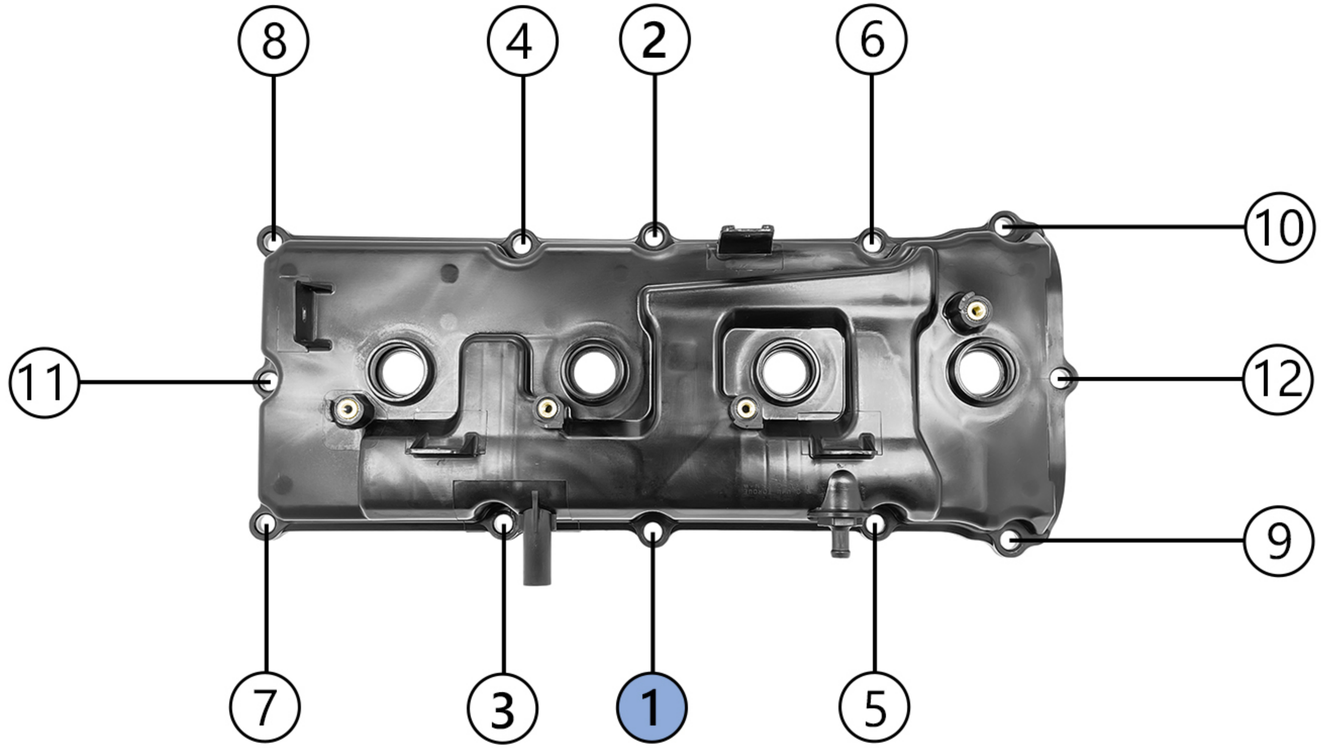

ATTENTION: It is recommended to reference the vehicle specific service manual and seek a professional technician's advice as Encore accepts no responsibility for personal injury, vehicle damage or any other damage resulting from installation or use of the product.